



Hazloc Heaters™

Safe heat when you need it!



HUH2 - *Hydronic Unit Heater*

SRH2 - *Steam Rig Heater*

This manual covers installation, maintenance, repair, and replacement parts.



Industrial Grade Heat-Exchanger Unit Heaters



WARNING!

 
**Please adhere to all instructions published in this manual.
Failure to do so may be dangerous and may void your warranty.**

*The heat-exchanger core is not field repairable.
Contact factory for a replacement core if fluid leakage occurs.*

www.HazlocHeaters.com

Model Coding

Heater Model Code & Option Codes



| Model Series | |
|--------------|--|
| SRH | |
| HUH | |

| Generation | |
|---------------------|--|
| For major revisions | |

| Fan Size | |
|-----------|----|
| 12 Inches | 12 |
| 16 Inches | 16 |
| 20 Inches | 20 |
| 24 Inches | 24 |
| 30 Inches | 30 |
| 36 Inches | 36 |

| Tube Passes | |
|-------------|---|
| 1 Pass | 1 |
| 3 Pass | 3 |
| 5 Pass | 5 |
| 7 Pass | 7 |

SRH & HUH steam units are 1 pass only

Not available on 12" fan size

Not available on 12", 16", & 20" fan sizes

| Approval Type | |
|---------------------|---|
| North America (CRN) | N |

| Options | |
|---------|--|
| H1 | Heresite Coated Core |
| H2 | Heresite Coated Cabinet |
| H3 | Heresite Coated Core & Cabinet |
| C2† | Connection, 2" NPT Male Fitting |
| C3† | Connection, 2" NPT Female 300lb Raised Face Flange |
| S | Stainless Steel Cabinet |
| ZZ | Special Build (Factory Assigned) |

| Motor Type | |
|------------|--------------------|
| G | General Purpose |
| E* | Hazardous Location |

| Motor^ ◊ | | |
|----------|-------|-----------|
| Voltage | Phase | Frequency |
| 115 | 1 | 60 |
| 208 | 1 | 60 |
| 230 | 1 | 60 |
| 208 | 3 | 60 |
| 230 | 3 | 60 |
| 460 | 3 | 60 |
| 575 | 3 | 60 |

^ NEMA motors are to be operated at $\pm 10\%$ of the nameplate voltage. Some motor manufacturers state that the motor is "usable at 208V" in their product literature but the line voltage must still meet the $\pm 10\%$ nameplate voltage tolerance (e.g. the permissible voltage range for a 230V motor is 207V – 253V).

For 3-phase motors the line-to-line full load voltage must be balanced within 1%.


† Thread-on fittings. Shipped loose and must be installed on site. C3 connection also includes C2 connection.

◊ Other voltages / frequencies available upon request. Longer lead times may apply. Contact factory


* Standard Marathon NEMA ex-proof motor is suitable for Class I & II, Div. 1 & 2, Groups C, D, F & G; T3B.

Physical Dimensions (12 inch to 30 inch models)

Note: Inlet and Outlet coupling connection locations can be reversed in the field by rotating the core.

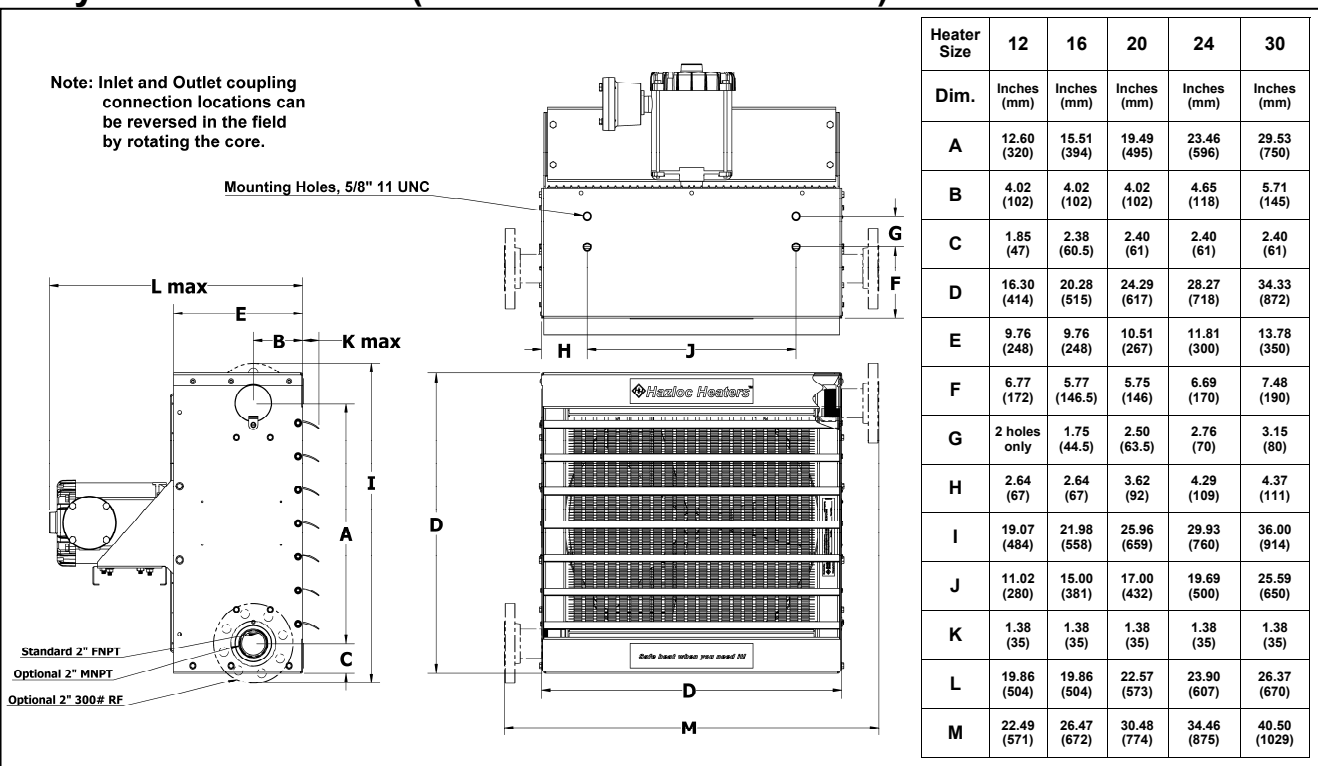

Physical Dimensions (36 inch model)

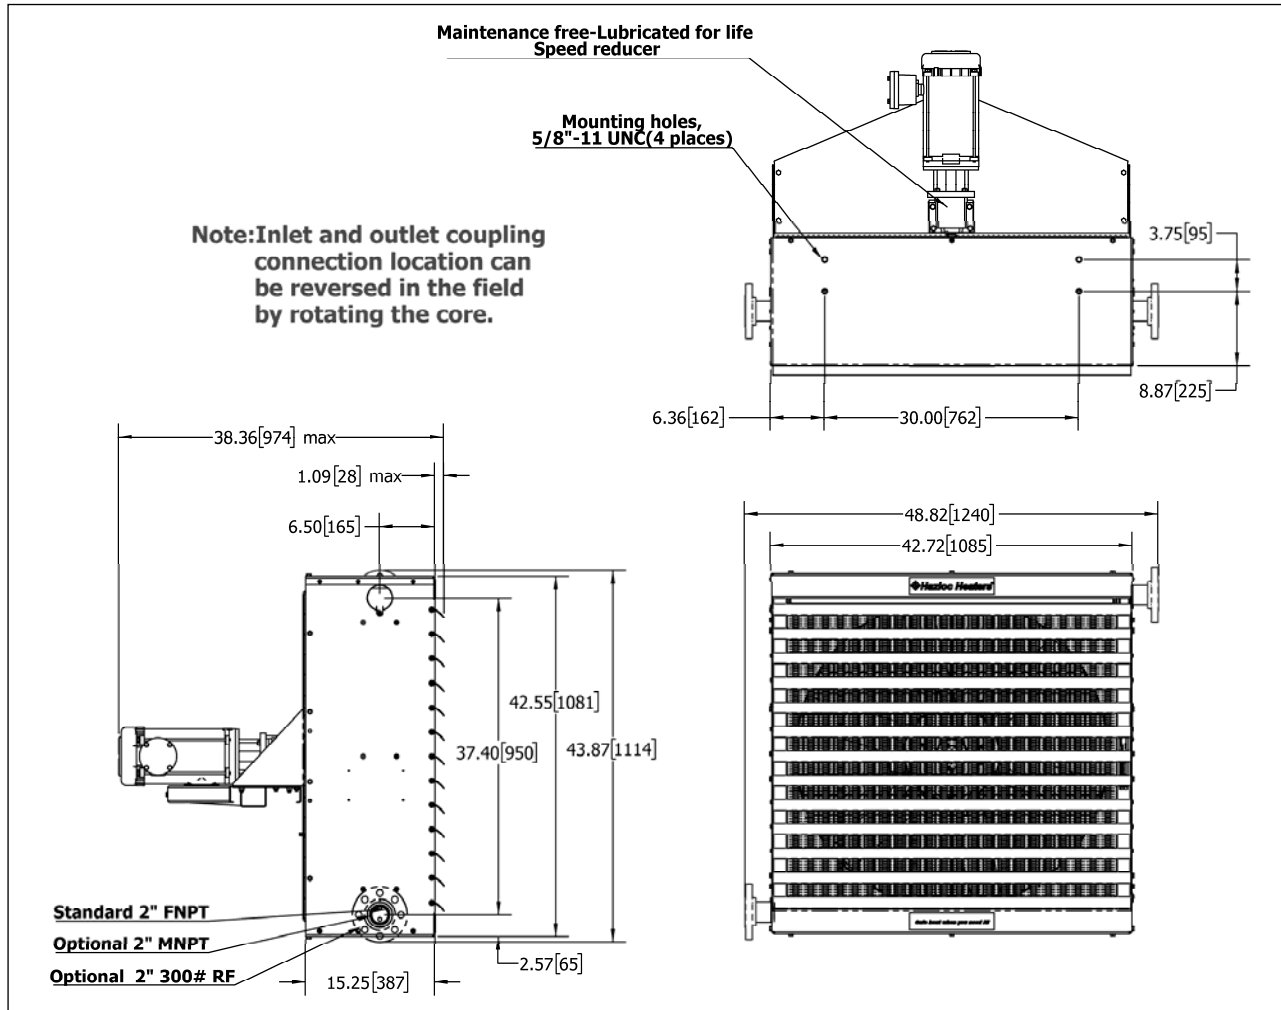

Specifications By Model Size - North American Heaters - 60Hz

| Model | | 12" | 16" | 20" | 24" | 30" | 36" |
|---------------------------|--------------------------|------------------------|-------------|-------------|-------------|-------------|--------------|
| Fan Diameter | inch (mm) | 12 (304.8) | 16 (406.4) | 20 (508.0) | 24 (609.6) | 30 (762.0) | 36 (914.4) |
| Air Delivery* | CFM (m ³ /hr) | 1090 (1852) | 1650 (2803) | 3000 (5097) | 3800 (6456) | 5500 (9344) | 8350 (14186) |
| Approx. Air Velocity* | FPM (m/s) | 1305 (6.6) | 1111 (5.6) | 1309 (6.6) | 1138 (5.8) | 1066 (5.4) | 928 (4.7) |
| Air Throw* @ 15 psi steam | ft (m) | 45 (13.7) | 65 (19.8) | 70 (21.3) | 80(24.4) | 85 (25.9) | 70 (21.3) |
| Motor Power | HP (Watts) | 1/4 (186) or 1/3 (248) | | 1/2 (373) | 1/2 (373) | 3/4 (559) | 1 (746) |
| Rec. Min. Mounting Height | ft (m) | 7.5 (2.3) | 7.5 (2.3) | 7.5 (2.3) | 7.5 (2.3) | 7.5 (2.3) | 7.5 (2.3) |

* At 70°F (21°C), 60 Hz and sea level.

General Specifications

| | |
|--|---|
| Pressure Equipment Approvals | SRH2: North America - CRN: 0H14931.2C - steam. HUH2: North America - CRN: 0H14933.2C - steam or fluids. |
| Heater Core Maximum Pressure Rating | SRH2 = 200 psig (1379 kPa). HUH2 = 400 psig (2758 kPa). |
| Heater Core Maximum Design Temp. | 550 °F (288°C). |
| Heater Core Minimum Design Metal Temp. | -20°F (-29°C). |
| Cabinet Material | 14-gauge (0.075") (1.9 mm) steel. 36" model is 12-gauge (0.105") (2.7 mm) steel. Epoxy/polyester powder coated. |
| Louver Blades | Anodized extruded aluminum. |
| Fan | Spark-resistant aluminum |
| Fan Guard | Split design with close wire spacing. A Ø3/8" (9.5 mm) probe will not enter. |
| Motor Drive | Thermally protected permanently lubricated ball bearing type. (36" model comes with maintenance free speed reducer). |
| Mounting Holes | 5/8"-11 UNC: 4 holes at top of heater (12" model has only 2 holes). |
| Fluid Connections | Standard: 2" NPT female inlet and outlet (configuration of fluid connection locations can be reversed by rotating the core). Other connection types are available (see model code chart). |
| Header Material | 3/16" (4.8 mm) carbon steel plate conforming to ASME requirements. |
| Finned Tubes | 5/8" (15.9 mm) outside diameter [16-gauge, 0.065" (1.6 mm) wall thickness] carbon steel tubes with 1-1/2" (38.1 mm) outside diameter copper-free, L-foot, tension-wound aluminum fins @ 10 fins per inch. |

Weights - North American Heaters

| SRH2 Heaters | | 12" | 16" | 20" | 24" | 30" | 36" |
|------------------------------|----------|------------|------------|------------|-------------|-------------|-------------|
| Net Weight (no options) | Lbs (kg) | 94 (42.6) | 114 (51.7) | 158 (71.7) | 225 (102.1) | 279 (126.5) | 522 (236.8) |
| Shipping Weight (no options) | Lbs (kg) | 144 (65.3) | 166 (75.3) | 216 (98.0) | 290 (131.5) | 354 (160.6) | 634 (287.6) |
| with 2" NPT nipples (add) | Lbs (kg) | 1 (0.4) | 1 (0.4) | 1 (0.4) | 1 (0.4) | 1 (0.4) | 1 (0.4) |
| with flanges & nipples (add) | Lbs (kg) | 14 (6.3) | 14 (6.3) | 14 (6.3) | 14 (6.3) | 14 (6.3) | 14 (6.3) |
| HUH2 Heaters | | 12" | 16" | 20" | 24" | 30" | 36" |
| Net Weight (no options) | Lbs (kg) | 88 (39.9) | 106 (48.1) | 149 (67.6) | 210 (95.3) | 264 (119.7) | 491 (222.7) |
| Shipping Weight (no options) | Lbs (kg) | 138 (62.6) | 158 (71.7) | 207 (93.9) | 275 (124.7) | 339 (153.7) | 603 (273.5) |
| with 2" NPT nipples (add) | Lbs (kg) | 1 (0.4) | 1 (0.4) | 1 (0.4) | 1 (0.4) | 1 (0.4) | 1 (0.4) |
| with flanges & nipples (add) | Lbs (kg) | 14 (6.3) | 14 (6.3) | 14 (6.3) | 14 (6.3) | 14 (6.3) | 14 (6.3) |

Noise Data By Model Size - North American Heaters - 60Hz

| Model | | 12" | 16" | 20" | 24" | 30" | 36" |
|-----------------------|---------|-----|-----|-----|-----|-----|-----|
| Front of Heater (dBA) | 3 feet | 78 | 78 | 83 | 82 | 90 | 82 |
| | 10 feet | 71 | 73 | 76 | 76 | 83 | 76 |
| | 15 feet | 70 | 70 | 74 | 74 | 81 | 74 |
| Rear of Heater (dBA) | 3 feet | 78 | 78 | 83 | 82 | 89 | 80 |
| | 10 feet | 71 | 72 | 77 | 75 | 83 | 76 |
| | 15 feet | 70 | 71 | 75 | 74 | 81 | 74 |

Conditions For Safe Use

1. Remove any dirt / dust from heater cabinet using a damp cloth to mitigate electrostatic charge build up.
2. Do not install the heater in an environment which could potentially cause an electrostatic charge build up on the cabinet (i.e. exposure to high pressure steam).
3. The heater core is NOT field repairable. All defective cores must be replaced with a factory supplied unit.
4. The motor is NOT field repairable. All defective motors must be replaced with a factory supplied or factory approved unit.
5. Flameproof joints are NOT field repairable. Any damaged enclosures/fittings will have to be replaced with factory approved units.
6. For any field repairs use only original factory installed fasteners or factory supplied replacement fasteners.

— WARNING! —

Read and follow the instructions in this manual. Failure to do so may result in severe or fatal injury.

1. Heater is to be transported in the factory supplied crate.
2. Heater is to be stored indoors in a clean dry environment.
3. Heater is to be installed and serviced only by qualified personnel and must adhere to all applicable codes.
4. Ensure the product certifications and ratings meet all the requirements for the installation.
5. Ensure all field wiring meets local codes and certification requirements.
6. Heater is suitable for use in hazardous locations only if fitted with an approved electric motor and the heat exchanger fluid temperature is below the ignition temperature of the atmosphere
7. As per the North American CRN, this product is for use with non-lethal fluids only (see ASME Section VIII, Div 1, UW-2) .
8. Ensure that the proper warning and safety systems are installed to protect the heater from overpressure.
9. Do not use if the heater core is damaged or leaking. Contact factory for a replacement core, the core is not field repairable.
10. Do not operate heater in atmospheres which are corrosive to aluminum or steel, unless it has been coated with a factory approved protective coating.
11. Heater must be kept clean. When operating in a dirty environment, regularly clean the fin tubes, fan, fan guard, fan shroud, motor, louvers, and cabinet. Refer to recommended maintenance procedures.
12. The minimum gap between the fan and fan shroud is to be maintained at all times. See installation and repair instructions for the minimum gap requirements.
13. Use factory supplied or approved replacement parts only.
14. Follow all local codes and regulations for the disposal of used or damaged parts or products.
15. A boiler water chemical treatment program is recommended to reduce / prevent corrosion in piping systems.

— INSTALLATION —

These instructions are to be used as a general guideline only.

Location

Please follow guidelines below for optimum heating results:


1. Do not install heaters such that airflow is blocked or impeded by equipment or walls.
2. For occupant comfort, position heaters so that air discharge is directed across areas of highest heat loss, such as doors, windows, and outside walls.
3. For large areas, arrange heaters such that the air discharge of one heater is directed towards the inlet of the next heater. This sets up a rotational airflow with air circulation in the central area of the building.
4. For equipment freeze protection, direct air discharge at required equipment.
5. For large workshops or warehouses it may be acceptable to use fewer, but larger heaters.
6. Do not direct air discharge towards a room thermostat.
7. Heater inlet and outlet coupling connection locations can be reversed in the field by removing the core, rotating it 180 degrees, and then re-installing it. Cabinet plugs can then be repositioned.

Mounting

1. A variety of mounting brackets are available from the factory to aid in installation.
2. The heater is designed to be installed in an upright and level position. While it may be installed in other positions, for steam service, the inlet must be above the outlet and the bottom of the heat exchanger must drain towards the outlet.
3. Heaters are designed to be suspended from the top of the cabinet using either two or four 5/8"–11 UNC bolts or threaded rod.
4. It is essential that adequate structural support be provided for installation. The mounting structure must be strong enough to support the heaters weight, provide sufficient stiffness to prevent excessive vibration, and withstand all probable abusive situations such as transportable installations where truck off-loading impacts, etc. may occur.

Mounting Heights and Clearances

1. To ensure that warm air reaches the floor, heaters are usually mounted 7-1/2 ft. (2.3m) to 12 ft. (3.6 m) above the floor. Heaters may be mounted at higher elevations and still provide warm air at floor level however, the maximum mounting elevation at which this occurs depends on location and operational conditions.
2. Louvers may be adjusted to provide greater downward deflection of the discharge air. However, it is recommended that louvers not be set <math><15^\circ</math> from the closed position.

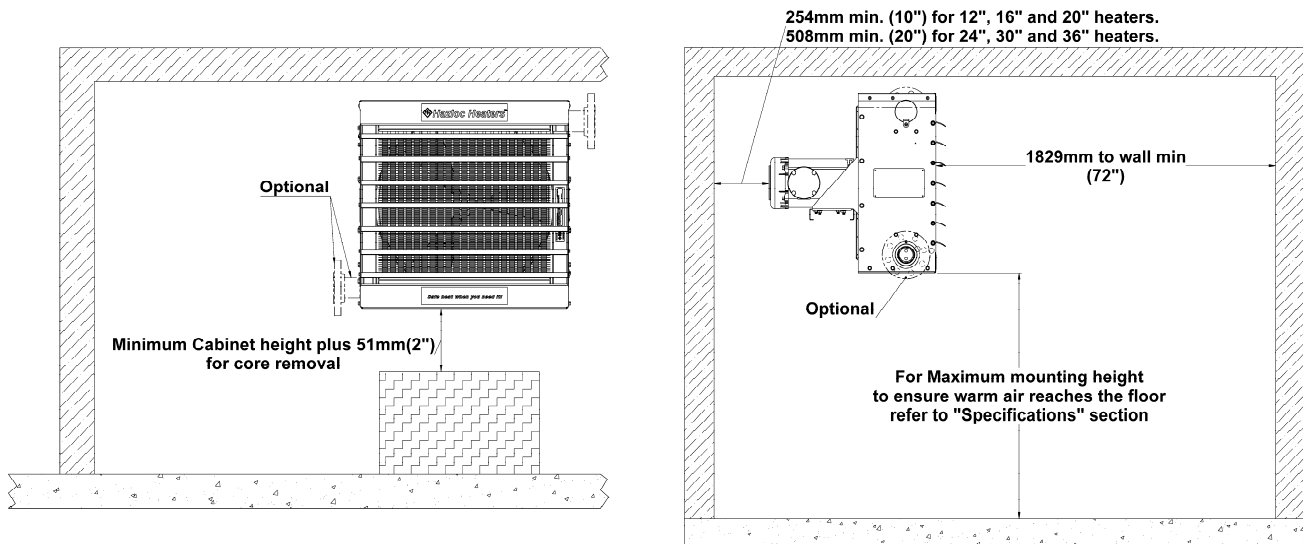

Fan Clearance

1. Verify the minimum required clearance between fan blades / fan shroud and the fan blades / fan guard prior to heater power up.


| Heater Size | 12" | 16" | 20" | 24" | 30" | 36" |
|---------------|--------|--------|--------|--------|--------|--------|
| Min Clearance | 2.0 mm | 2.0 mm | 2.5 mm | 3.0 mm | 3.8 mm | 4.6 mm |

— PIPING SUGGESTIONS —
Suggested piping arrangements only, refer to local codes for more detail


Steam Systems

- Corrosion in steam and condensate system piping & unit heaters occurs as a result of the formation of acids within the steam and condensate. To prevent corrosion a boiler water chemical treatment program is recommended.
- Install heaters using proper piping practices.
- Do not use with fluids corrosive to steel.
- Use a properly sized steam trap. Inspect traps regularly under your routine maintenance program.
- In horizontal pipe runs, use eccentric reducers only.
- For steam service use only single-pass heaters.

Note: Heater inlet and outlet coupling connection locations can be reversed in the field by rotating the core.

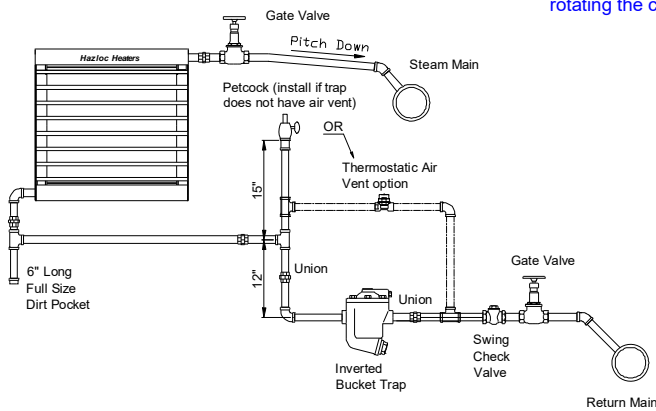


Unit Heater Connection for High Pressure Steam

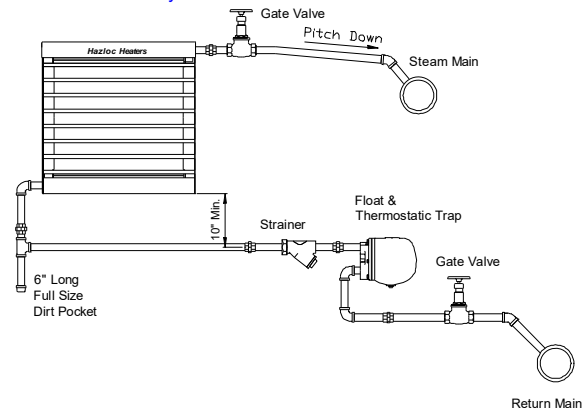

**Unit Heater Connection for Low Pressure Steam
 - Open Gravity or Vacuum Return System**

Fluid Systems

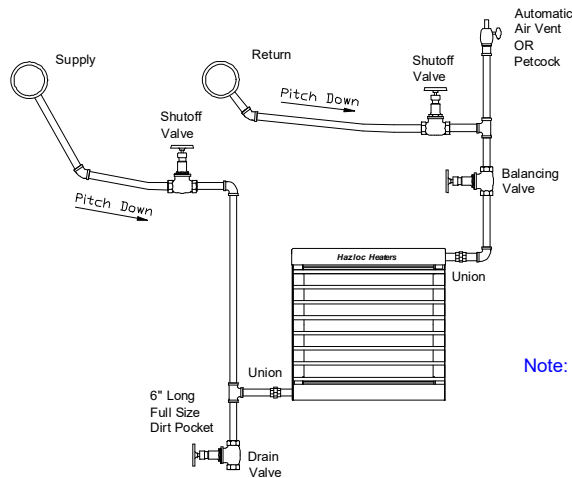

Unit Heater Connections to Overhead Fluid Mains

- Install using proper piping practices.
- Do not use with fluids corrosive to steel.

Note: Heater inlet and outlet coupling connection locations can be reversed in the field by rotating the core.


— Piping Practices —

1. Steam unit heaters condense steam rapidly, especially during warm-up periods. The return piping must be planned to keep the heat-exchanger's core free of condensate during periods of maximum heat output, and steam piping must be able to carry a full supply of steam to the unit heater to take the place of condensed steam. Adequate pipe size is especially important when a unit heater fan is operated under on-off control because the condensate rate fluctuates rapidly.
2. Heater is to be connected and serviced only by qualified personnel. For additional piping information refer to local codes.
3. Eliminate pipe stress by adequately supporting all piping. Do not rely on heater to support piping.
4. Take off all branch lines from the top of steam mains, preferably at a 45° angle, although vertical 90° connections are acceptable.
5. Pipe the branch supply line into the steam unit heater's inlet at the top and the return branch line from the outlet at the bottom. **The heater's inlet and outlet coupling connections can be reversed in the field by rotating the heat-exchanger core.** Refer to Page 10, **Heat-Exchanger Core Assembly Replacement.**
6. In steam systems, the branch from the supply main to the heater must pitch down towards the main and be connected to its top in order to prevent condensate in the main from draining through the heater. In long branch lines, a drip trap may be needed.
7. Allow for pipe expansion to prevent excessive strain on the unit heater's heat-exchanger core.
8. The return piping from steam unit heaters should provide a minimum drop of 10" (254 mm) below the heater so that the pressure of water required to overcome resistances of check valves, traps, and strainers will not cause condensate to remain in the heater.
9. In steam systems, where horizontal piping must be reduced in size, use eccentric reducers that permit the continuance of uniform pitch along the bottom of piping (in downward pitched systems). Avoid using concentric reducers on horizontal piping, because they can cause water hammer.
10. Installing dirt pockets at the outlet of unit heaters and strainers with 0.063 in. (2 mm) perforations to prevent rapid plugging are essential to trap dirt and scale that might affect the operation of check valves and traps. Strainers should always be installed in the steam supply line if the heater is valve controlled.
11. In steam or hot water systems, rapid air removal is required because entrained air is a cause of corrosion. Hot water systems should be equipped with suitable air vent valves for rapid and complete air removal at high points, at the top of each unit heater, and ends of both supply and return mains. Proper air venting for steam systems can be achieved by use of a steam trap with an internal air vent.
12. Steam traps must be located below the outlet of the unit heater. Consult the trap manufacturer for specific recommendations. Each steam unit heater should be provided with a trap of sufficient size and capacity to pass a minimum of twice the normal amount of condensation released by the unit at the minimum differential pressure in the system. Trap capacity is based on the pressure differential between supply and return mains. Steam systems should be equipped with a float and thermostatic trap or inverted bucket trap with an air bypass.
13. If the condensate return line is above the heater outlet or is pressurized, install a check valve after the steam trap and a drain valve at the strainer to drain the system during the off season.
14. Install pipe unions and shut-off valves at connection points of each unit heater to allow maintenance or replacement of unit without shutting down and draining the entire system. For hot water systems include a balancing valve in return line for flow regulation. A drain valve should be provided below each unit heater to allow removal of water from the heat-exchanger core if located in an area subject to freezing.
15. Adequate air venting is required for low-pressure closed gravity systems. The vertical pipe connection to the air vent should be at least 3/4" NPT to allow water to separate from the air passing to the vent. If thermostatic instead of float-and-thermostatic traps are used in vacuum systems, a cooling leg must be installed ahead of the trap.
16. In high-pressure systems, it is customary to continuously vent the air through a petcock unless the steam trap has a provision for venting air. Most high-pressure return mains terminate in flash tanks that are vented to the atmosphere. When possible, pressure reducing valves should be installed to permit operation of the heaters at low pressure. Steam traps must be suitable for the operating pressure encountered.
17. On steam systems where the steam supply to the unit heater is modulated or controlled by a motorized valve, a vacuum breaker should be installed between the unit outlet and a float and thermostatic trap.


— Warning —
Wiring should only be connected by qualified personnel.

— Electrical Wiring of Heater and Remote Mount Thermostats —


Wiring diagram is located on the motor. On all three-phase heater motors, it is necessary to verify that the fan rotation is correct (counter clockwise when facing the rear of the heater). If air delivery is not from the front of the heater, reverse any two supply leads in the motor junction box or the main electrical panel.

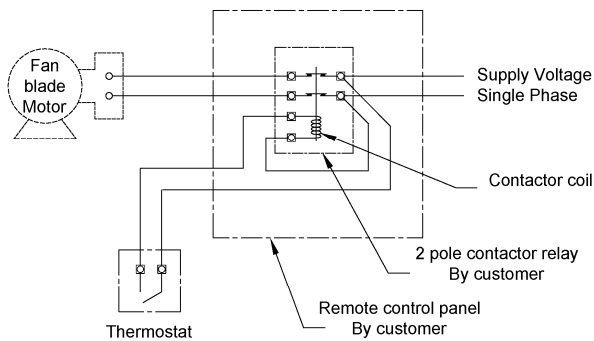


**Thermostatic Control for High motor current
 Single phase motors**

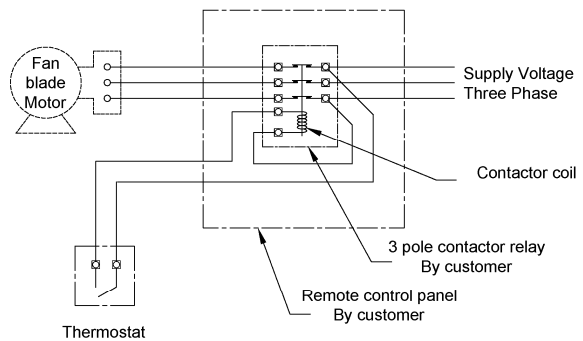

**Thermostatic Control for Low voltage
 Three phase motors**

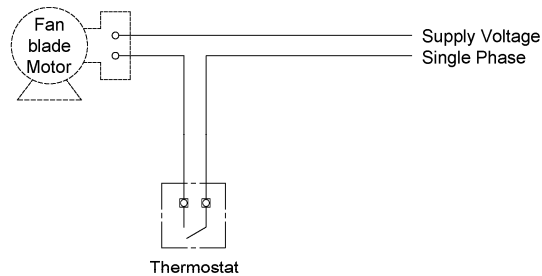

**Thermostatic Control for Low motor current
 Single phase motors**

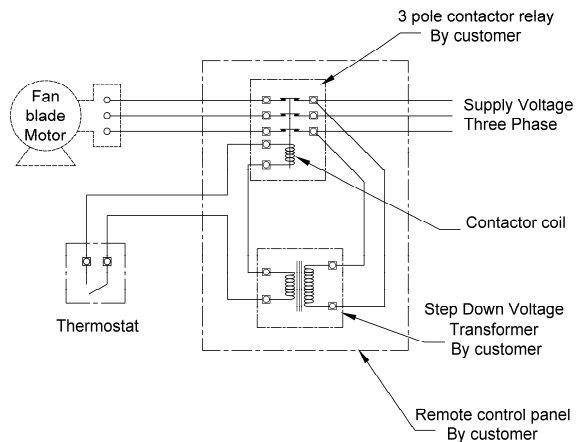

**Thermostatic Control for High voltage
 Three phase motors**

BTX - Bi-metal Explosion Proof Thermostat

Electrical Ratings

- Voltage free contacts, 50/60Hz
- 15 Amp up to 480VAC (resistive)
- 125VAC @ 3/4HP (0.55kW)
- 250VAC @ 1 1/2HP (1.12kW)

PILOT DUTY Ratings

- 490 VA @ 125VAC
- 800 VA @ 250VAC

— WARNING! —

Heater should only be service by qualified personnel.

Disconnect unit heater from power supply before starting any service or repair work.

Follow all lockout / tagout procedures.

Failure to follow these procedures may result in injury.

— Repair and Replacement —

Heat-Exchanger Core Assembly Replacement

1. Heat-exchanger core assemblies are heavy and replacement requires two people for safety reasons.
2. It is not necessary to dismount unit heater from its support structures to remove the heat-exchanger core assembly. However, it may be advisable in some instances to allow for core assembly removal at ground or bench level.
3. Remove the bottom heater cabinet cover which is attached with 6 screws and 3 bolts.
4. Support the heat exchanger core assembly, then remove the 4 core bolts on each side of the cabinet (36" models have 6 core bolts).
5. Lower the core assembly from heater.
6. Reverse the procedure to install replacement core and tighten 4 core bolts to 90 in-lbs (10 N-m) torque, bottom panel screws to 28 in-lbs (3 N-m) , and fan panel bolts to 100 in-lbs (11 N-m) . (36" models have 6 core bolts)

Note: Heater inlet and outlet coupling connection locations can be reversed in the field by removing the core, rotating it 180 degrees, and then re-installing it. Cabinet plugs can then be repositioned.

| Torque Settings | | |
|---|----------|-------|
| Item | (in-lbs) | (N-m) |
| Fan blade set screw | 150 | 17 |
| 5/16 - 18 UNC motor nuts | 250 | 28 |
| 5/16 - 18 UNC motor mount bolts | 250 | 28 |
| 1/4 - 20 UNC fan panel bolts | 100 | 11 |
| 1/4 - 20 UNC fan guard self tapping screws | 100 | 11 |
| 1/4 - 20 UNC core bolts | 90 | 10 |
| #10 - 24 UNC bottom panel & louver blade screws | 28 | 3 |


Fan, Fan Guard or Motor Replacement

1. For replacement of fan or fan guard remove the 4 bolts holding motor to the motor mount. For 36" models also remove speed reducer bolts. If replacing motor only on 36" models, only remove motor mounting bolts and C-face flange bolts.
2. Detach two-piece fan guard assembly by removing top and bottom screws that attach the fan guard to the cabinet.
3. Remove fan guard pieces through top or bottom. Due to stiffness of fan guards, you may need to remove outer two top or bottom bolts that attach the fan panel to the top or bottom cabinet panels to provide sufficient clearance.
4. Lift the motor, (and speed reducer for the 36" model) and fan assembly off the motor mount.
5. Loosen fan hub screw and remove fan blade from motor shaft.
6. To reassemble, position fan on motor shaft with end of shaft even with face of hub. Ensure the set screw is facing towards motor and lined up perpendicular to factory-ground flat on motor shaft. This flat is our "Easy-Off" fan blade replacement feature and only comes on motors purchased from Hazloc Heaters. Tighten set screw to 150 in-lbs (17 N-m) torque.
7. Place motor, (and speed reducer for the 36" model) and fan assembly onto motor mount and fasten the two -piece fan guards to the cabinet.
8. Center fan in the fan-shroud opening. The gap between the fan blades and fan shroud should be even for all fan blades. Ensure the minimum gap is maintained for all blades. See page 6 for minimum gap values.
9. Bolt motor (and speed reducer for the 36" model) to motor mount, tighten nuts to 250 in-lbs (28 N-m) torque. Manually spin the fan blade to ensure it rotates freely before reconnecting heater to power supply. Fan must rotate counterclockwise when viewed from rear of heater.

— Parts List —

***** Please have heater model & serial number available before calling *****

12 inch to 30 inch models

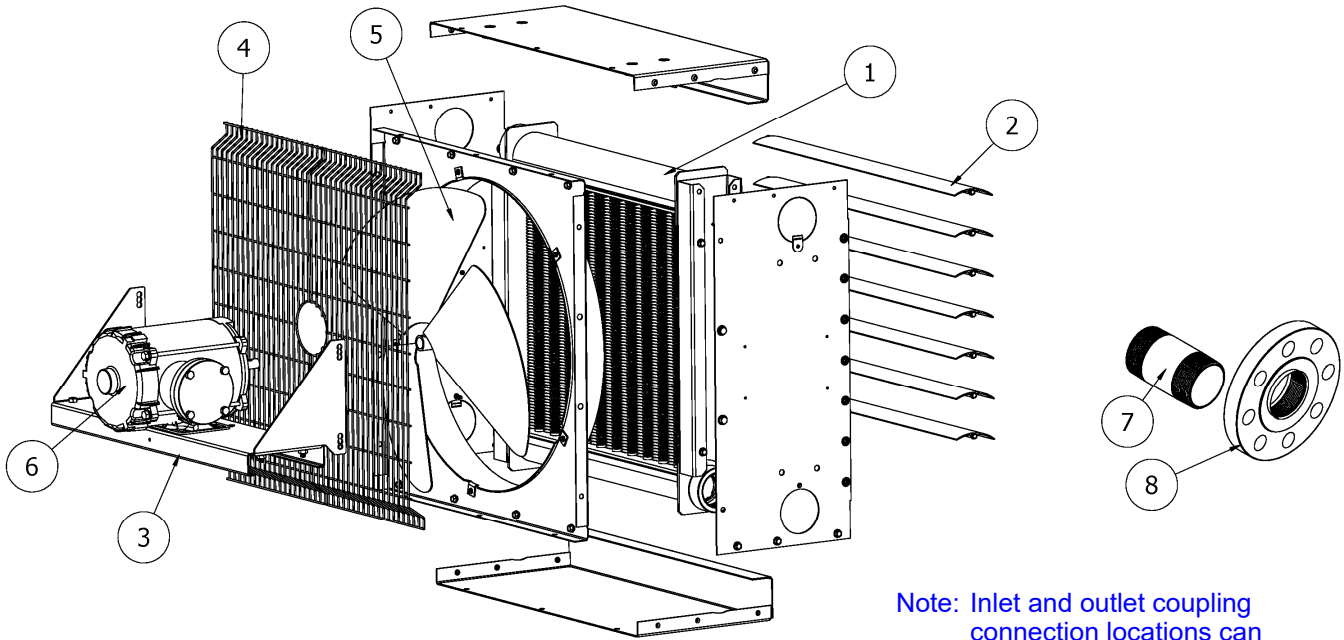

Note: Inlet and outlet coupling connection locations can be reversed in the field by rotating the core.

12 inch to 30 inch models


| Item No. | Description | 12 inch | 16 inch | 20 inch | 24 inch | 30 inch |
|--|-----------------------------------|--|-------------|-------------|-------------|-------------|
| | | Part Number | Part Number | Part Number | Part Number | Part Number |
| *** Please have heater model & serial number available before calling *** | | | | | | |
| 1 | Core Kit | Contact factory with heater model, size, number of passes and connection type Part #'s 1119 thru 1139 | | | | |
| 2 | Louver Blade kit | 1145 | 1146 | 1147 | 1148 | 1149 |
| 3 | Motor Mount Kit | 1151 | 1152 | 1153 | 1154 | 1155 |
| 4 | Fan Guard Kit | 1157 | 1158 | 1159 | 1160 | 1161 |
| 5 | Fan - 5/8 inch hub | 1163 | 1165 | 1167 | 1169 | 1171 |
| 6 | Motor Kit - 5/8 inch shaft | Specify motor voltage, phase, frequency, horsepower and type of enclosure (general purpose or explosion-proof) | | | | |
| 7 | Thread-on 2 inch NPT Nipple | 1176 | | | | |
| 8 | Thread-on 300# Raised Face Flange | 1177 | | | | |

*All replacement part kits include fasteners

— Parts List —

***** Please have heater model & serial number available before calling *****

36 inch model

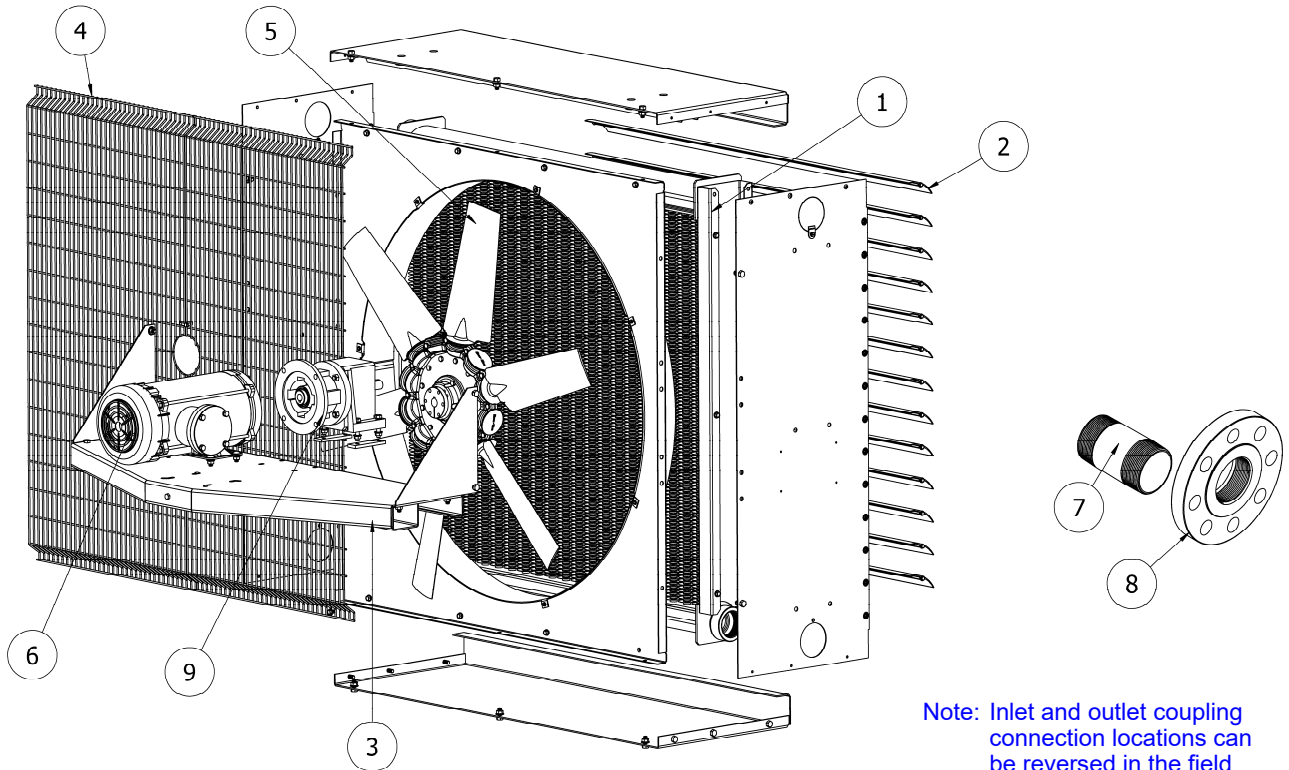

Note: Inlet and outlet coupling connection locations can be reversed in the field by rotating the core.

36 inch model

| Item No. | Description | 36 inch | |
|--|-----------------------------------|--|--|
| | | Part Number | |
| *** Please have heater model & serial number available before calling *** | | | |
| 1 | Core Kit | Contact factory with heater model, size, number of passes and connection type Part #'s 1141 thru 1144 | |
| 2 | Louver Blade Kit | 1150 | |
| 3 | Motor Mount Kit | 1156 | |
| 4 | Fan Guard Kit | 1162 | |
| 5 | Fan - 5/8 inch hub | 1173 | |
| 6 | Motor Kit - 5/8 inch shaft | Specify motor voltage, phase, frequency, horsepower and type of enclosure (general purpose or explosion-proof) | |
| 7 | Thread-on 2 inch NPT Nipple | 1176 | |
| 8 | Thread-on 300# Raised Face Flange | 1177 | |
| 9 | Speed Reducer Kit | 1178 | |

*All replacement part kits include fasteners

— WARNING! —

Heater should only be service by qualified personnel.

Disconnect unit heater from power supply before starting any service or repair work.
Follow all lockout / tagout procedures.
Failure to follow these procedures may result in injury.

— Maintenance Program —

Regular inspection, based on a schedule determined by the amount of dirt in the atmosphere, assures maximum operating economy and heating capacity.

Annual Inspection (before each heating season)

1. Check all terminal connections, electrical conductors, glands and cables for damage, looseness, defects, fraying, etc. and replace or tighten where applicable.
2. Check for fluid leakage from heat-exchanger core. If fluid leakage occurs, remove heater from service and have the heat-exchanger core replaced by a factory replacement unit. Refer to "Repair and Replacement" section for complete details. **Note: This heat-exchanger core is not field repairable.**
3. Check electrical junction box. Inside of enclosure must be clean, dry, and free from any foreign materials. The cover must also be completely on and tight.
4. Check motor shaft bearing play. Replace motor if play is excessive or if motor does not run quietly and smoothly. Motor bearings are permanently lubricated.
5. On 36" models, speed reducer is maintenance free. Check for excessive noise and vibration.
6. Check fan. Replace immediately if cracked or damaged. Check the gap between the fan and fan shroud meets the minimum spacing requirement.
7. Check louvers. Louver screws should be tight. Louvers are not to be set $<15^\circ$ of the closed position.
8. Check the tightness of all hardware. All nuts and bolts, including mounting hardware, must be tightened to torque settings on Page 10.
9. Turn heater motor on for a minimum of 10 minutes. Check for air exiting heater through louvers and smooth running of the motor and fan assembly.

Periodic Maintenance (before and as required during heating season)

1. Clean the following (remove dust using compressed air):

- Finned tubes
- Fan
- Fan Shroud
- Fan Guard
- Motor
- Louvers
- Cabinet



2. Check the following:

- Motor / fan assembly (and speed reducer on 36" models) for smooth and quiet operation.
- Louvers for proper angle and tightness.
- Electrical junction box covers are secure.
- Gap between the fan blade / fan shroud and the fan blade / fan guard meet the minimum spacing requirement (see page 6 for minimum values).

HEATER MAINTENANCE RECORD

Heater Model: _____

Serial No.: _____

| Date of Maintenance | Performed By | Maintenance Performed |
|---------------------|--------------|-----------------------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

Limited 18-Month Warranty

Hazloc Heaters™ warrants all **SRH2 & HUH2** series of heat-exchanger unit heaters against defects in materials and workmanship under normal conditions of use for a period of eighteen (18) months from date of purchase based on the following terms:

1. The heater must not be modified in any way.
2. The heater must be stored, installed and used only in accordance with the owner's manual and attached data plate information.
3. Replacement parts will be provided free of charge as necessary to restore any unit to normal operating condition, provided that the defective parts be returned to us freight prepaid and that the replacement parts be accepted freight collect.
4. The complete heater may be returned to our manufacturing plant for repair or replacement (at our discretion), freight charges prepaid.
5. Components damaged by contamination from dirt, dust, etc. or corrosion will not be considered as defects.
6. This warranty shall be limited to the actual equipment involved and, under no circumstances, shall include or extend to installation or removal costs, or to consequential damages or losses.



#1, 666 Goddard Ave. NE
Calgary, Alberta T2K 5X3
Canada
Tel.: +1-403-730-2488
Fax: +1-403-730-2482
Customer Toll Free (U.S. & Canada):
+1-866-701-Heat (4328)
www.HazlocHeaters.com

PRINTED IN CANADA
©Copyright 2024

The information contained in this manual has been carefully checked and verified for accuracy. Specifications subject to change without notice.

Hazloc Heaters is a trademark of
Hazloc Heaters Inc.