
HUH & SRH Heater Pipe Mounting Bracket (PMB) Installation Instructions

Ensure heater model number corresponds with the correct model and size of mounting bracket identified on the outside of packaging. SRH and HUH brackets are interchangeable.

WARNING!

Refer to heater owner's manual for mounting specifications and conditions. If the heater is installed on a structure that is to be transported, provide additional support for heater during transit. Suspended weight should not exceed 250 lbs (113 kg).

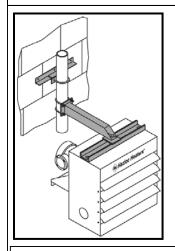

Pipe Mounting Bracket (PMB)

Note: Installer is required to supply:

- A) one piece of 3", schedule 40 or heavier, steel pipe cut to required length.
- B) a method of fastening Wall Angle Bracket to supporting structure. If using bolts, we recommend four 3/8" diameter, grade 5 bolts.
- C) a fastener to attach Pipe Base Plate to floor. This kit provides a 3/8" UNC x 2-3/4" Anchor Bolt for concrete floors.

STEP 1

Install Wall Angle Bracket to the wall (installer supplied fastening method) at an appropriate height to support the top of the pipe.

STEP 3

Using two U-bolts, lock washers, and 3/8" UNC

nuts, fasten short Pipe Angle Bracket and Can-

tilever Arm Assembly to the desired location on


the 3" steel pipe (hand tighten initially to permit

parts to be adjusted to final location after pipe

(7)(9)(12)

pivot point

is erected).

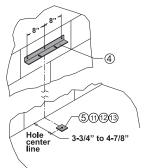

STEP 2

Install Pipe Base Plate to floor (installer supplied fastening method or 3/8" - UNC x 2-3/4" Anchor Bolt, washer and 3/8" of 2" deep into floor. Screw the nut, with washer, onto bolt 1/8" Pipe Base Plate hole into drilled hole so that nut and washer are seated on Pipe

PACKAGE CONTENTS

Item Qty. Description

- ◑ Cantilever Arm Assembly
- ② 1 **Heater Mounting Channel**
- (3) 1 Pipe Angle Bracket
- **(**4) 1 Wall Angle Bracket
- (5) 1 Pipe Base Plate
- 6 3 Bolt, 5/8" - 11UNC x 1-1/4"
- (7) 8 Lock Washer, 3/8"
- (8) 2 Lock Washer, 5/8"
- (9) 3 U-Bolt, 3/8" - 16UNC x 3-1/2"
- (10) Bolt. 3/8" - 16UNC x 1" 2
- (11) 1 Anchor Bolt, 3/8"- UNC x 2-3/4"
- (12) Nut, 3/8" - 16UNC 9
- (13) 5 Flat Washer, 3/8"


nut). To install Anchor Bolt, drill a 3/8" diameter hole a minimum past the end. Drive bolt through Base Plate. Turn nut until tight.

Lift heater and fasten to Cantilever Arm Assembly using one 5/8" - 11UNC x 1-1/4" bolt.



STEP 4

Erect pipe on Base Plate. Using two 3/8" -16UNC x 1" bolts, two flat washers per bolt, lock washers and 3/8" -16UNC nuts, fasten short Pipe Angle Bracket to Wall Angle Bracket. Position Cantilever Arm Assembly at final mounting height and tighten U-bolts.

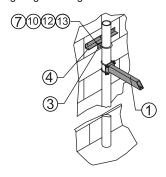

STEP 5

Bolt Heater Mounting Channel to heater using two 5/8" - 11UNC x 1-1/4" bolts and two lock washers.

For heater models with four holes, select the two holes as follows:

- SRH1/HUH1-16, bolt in holes closest to the motor.
- SRH1/HUH1-20 & 24, bolt in holes closest to the louvers.

